Register your product and get support at
www.philips.com/welcome

HMP2000

User manual

PHILIPS

EN Please refer to the safety information before using the product.

Trademark notice

HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI licensing LLC in the United States and other countries.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.

"This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft."
Content owners use Microsoft PlayReadyTM content access technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady protected content and/or WMDRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device's ability to consume PlayReady-protected content. Revocation should not affect unprotected content or content protected by other content access technologies. Content owners may require you to upgrade PlayReady to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

Safety and notice

Read and understand all instructions before you use this player. If damage is caused by failure to follow the instructions, the warranty does not apply.

Safety

Risk of electric shock or fire!

- Never expose the product and accessories to rain or water. Never place liquid containers, such as vases, near the product. If liquids are spilt on or into the product, disconnect it from the power outlet immediately. Contact Philips Consumer Care to have the product checked before use.
- Never place the product and accessories near naked flames or other heat sources, including direct sunlight.
- Never insert objects into the ventilation slots or other openings on the product.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Disconnect the product from the power outlet before lightning storms.
- When you disconnect the power cord, always pull the plug, never the cable.

Risk of short circuit or fire!

- Before you connect the product to the power outlet, ensure that the power voltage matches the value printed on the back of the product. Never connect the product to the power outlet if the voltage is different.
- Never expose the remote control or batteries to rain, water or excessive heat.
- Avoid force coming onto power plugs. Loose power plugs can cause arcing or fire.

Risk of injury or damage to the product!

- Never place the product or any objects on power cords or on other electrical equipment.
- If the product is transported in temperatures below 5°C, unpack the product and wait until its temperature matches room temperature before connecting it to the power outlet.

Risk of overheating!

- Never install this product in a confined space. Always leave a space of at least four inches around the product for ventilation. Make sure that curtains or other objects never cover the ventilation slots on the product.

Risk of contamination!

- Remove the battery if it is exhausted or if the remote control is not to be used for an extended period of time.
- Batteries contain chemical substances, they should be disposed of properly.

Risk of swallowing batteries!

- The product/remote control may contain a coin type battery, which can be swallowed. Keep the battery out of reach of children at all times!

Care of the environment

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste.Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

Compliance

This product complies with the radio interference requirements of the European Community.

CE 0168 ! R&TTE Directive 1999/5/EC

AT	✓	BE	✓	CY	✓	CZ	✓	DK	✓	EE	✓
DE	✓	GR	✓	HU	✓	IE	✓	IT*	✓	LV	✓
MT	✓	NL	✓	PL	✓	PT	✓	SK	✓	SI	✓
GB	✓	IS	✓	LI	✓	NO	✓	CH	✓	BG	✓

FI	✓	IR*	✓
LT	✓	LU	✓
ES	✓	SE	✓
RO	✓	TR	✓

Copyright

This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

Be responsible
Respect copyrights

2011 © Koninklijke Philips Electronics N.V.
Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V or their respective owners. Philips reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.

Warranty

- Risk of injury, damage to the player or void of warranty! Never attempt to repair the player yourself.
- Use the player and accessories only as intended by the manufacturer. The caution sign printed on the back of the player indicates risk of electric shock.
- Never remove the player cover. Always contact Philips Customer Support for service or repairs.
- Any operation expressly prohibited in this manual, or any adjustments and assembly procedures not recommended or authorized in this manual shall void the warranty.

Philips Electronics Hong Kong Ltd. hereby offers to deliver, upon request, a copy of the complete corresponding source code for the copyrighted open source software packages used in this product for which such offer is requested by the respective licenses.
This offer is valid up to three years after product purchase to anyone in receipt of this information. To obtain source code, please contact open.source@philips.com. If you prefer not to use email or if you do not receive confirmation receipt within a week after mailing to this email address, please write to "Open Source Team, Philips Intellectual Property & Standards, P.O. Box 220, 5600 AE Eindhoven, The Netherlands." If you do not receive timely confirmation of your letter, please email to the email address above.

Contents

1 Control and play 10
Use the remote control 10
Text entry 11
Select play options 12

2 Browse media files 13
Browse all files 14
Browse movie files 15
Browse music files 16
Browse photo files 17

3 Play from online services 18
Connect to the Internet 18
Watch online TV or shared video 19
Enjoy Internet services 19

4 Manage files 21
Copy or move files and folders 21
Delete files and folders 22
Rename files and folders 22
Create music playlists 22
Create photo albums 23

5 Setup 24
System 24
Audio 25
Video 25
Network 25
MISC 25

6 EasyLink 26

7 Update the firmware 27
Update the firmware through the Internet 27
Update the firmware through a storage device 27

8 Troubleshooting 28

9 Specification 29

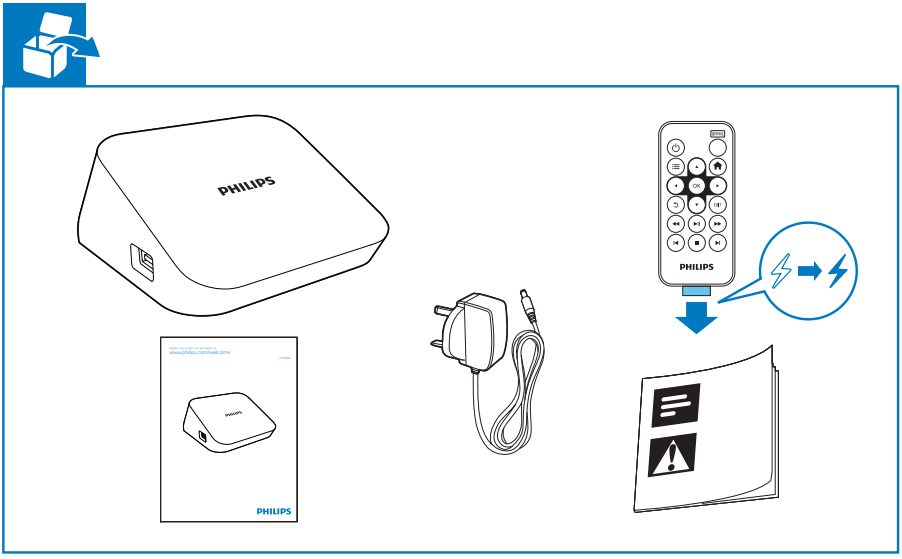
PHILIPS
PHILIPS
PHILIPS

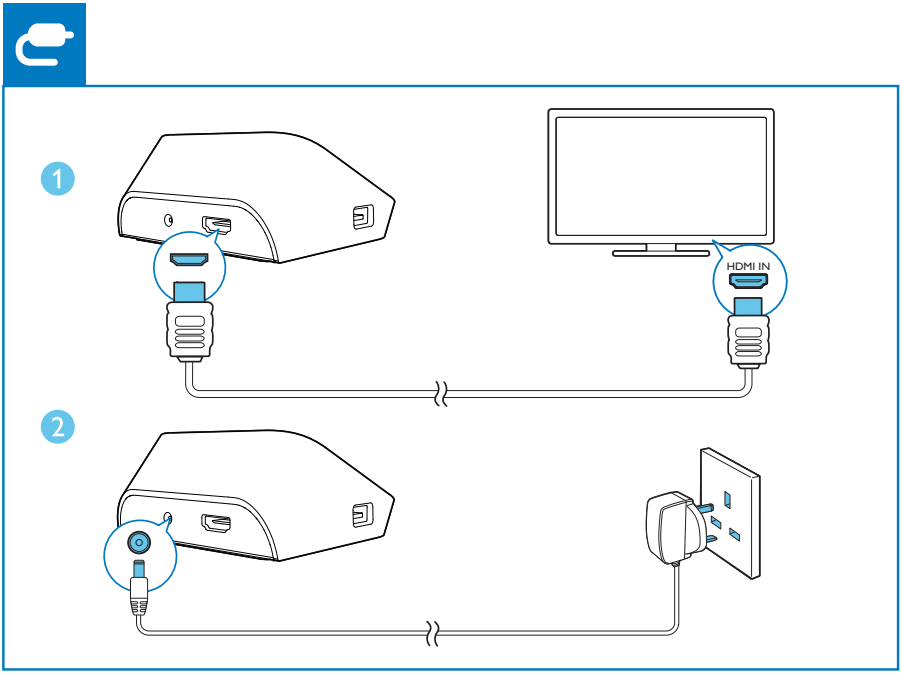
1
HDMI IN
2

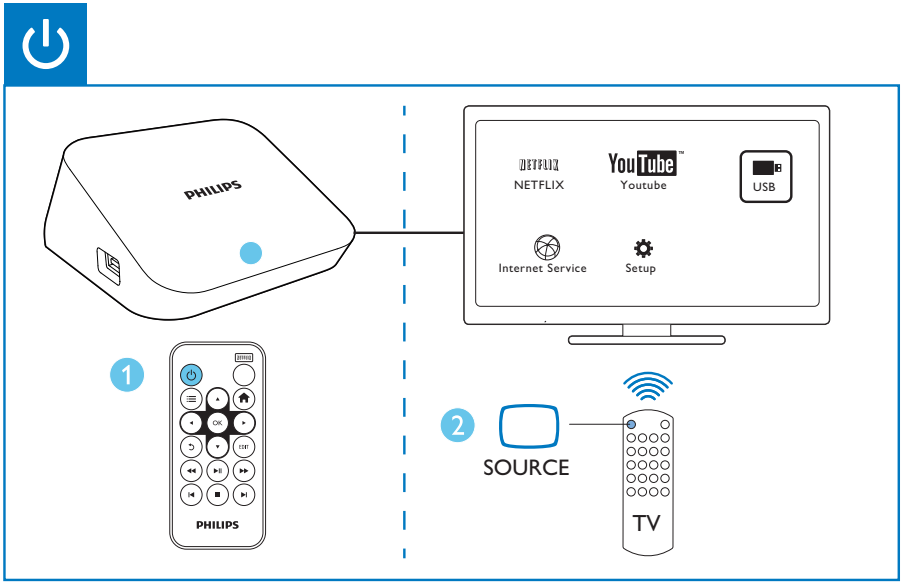
PHILIPS
NETFLIX
Youtube
USB
Internet Service
Setup
1
PHILIPS
2
SOURCE
TV

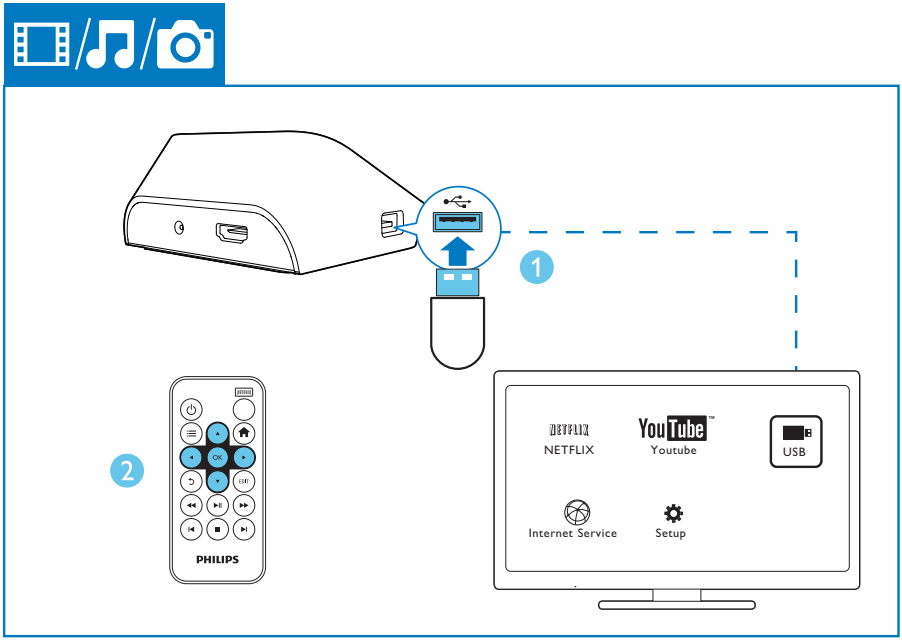
1
2
PHILIPS
NETFLIX
Youtube
USB
Internet Service
Setup

WiFi

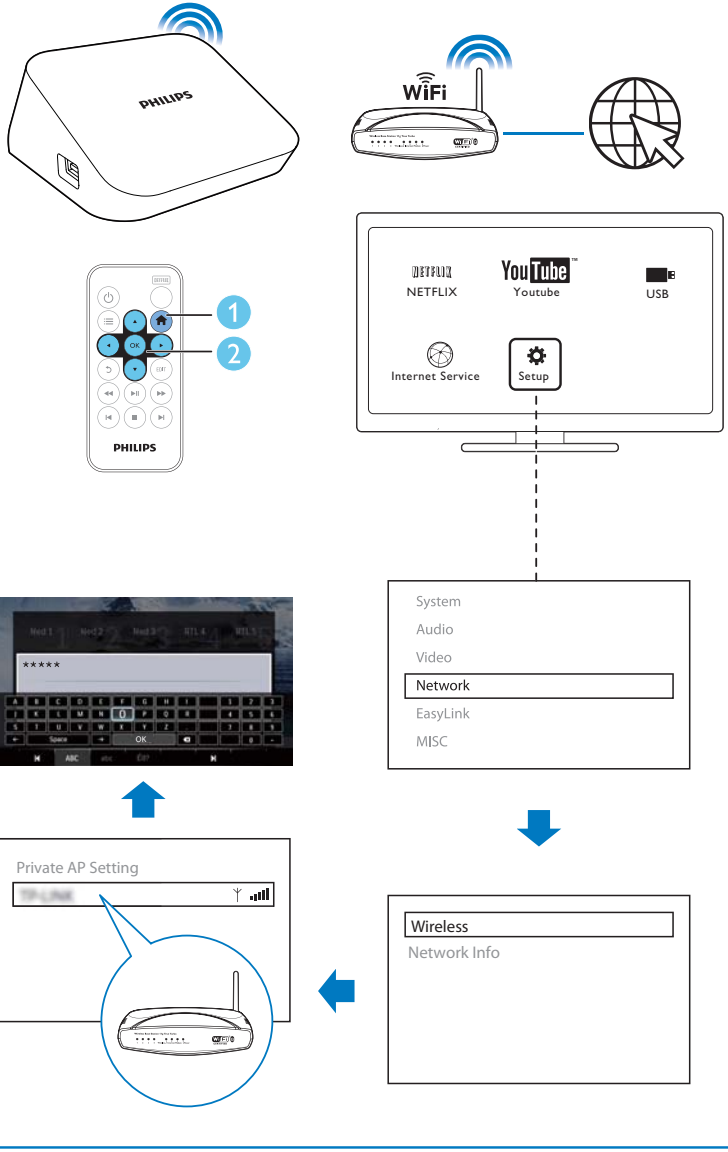
PHILIPS
WiFi
NETFLIX
Youtube
USB
Internet Service
Setup
1
2
OK
PHILIPS
System
Audio
Video
Network
EasyLink
MISC
*****
Private AP Setting
Wireless
Network Info

1 Control and play

Use the remote control

Function	Buttons / Actions
Switch the player on or to standby mode	⏻
Navigate between screens or through options	
• Return to the Home screen	🏠
• Navigate through options	▲▼◀▶
• Back one level	↩
• Confirm the option	OK
View options menu for media play or file navigation	☰
Control the play	
• Start, pause, or resume the play	▶❚❚
• Stop the play	■
• Skip to the previous/ next media file	⏮ / ⏭
• Search backwards or forward within current file	◀◀ / ▶▶
• Rotate a photo	▲ / ▼
• Display the information about current file during play	OK
• Access online videos and TV episodes from Netflix	**Netflix**
Remove current connected device safely	Press and hold ■
Manage files/ folders under **[Folder]** on or between connected storage devices	**EDIT**

*If there is no button press or media play on the playerfor 5 minutes, the screen saver is activated.
*If there is no button press or media play on the playerfor 15 minutes, the device switches to standby mode automatically except that:

- You enter text on the onscreen keyboard;

- You select setup options under **[Setup]**.

Text entry

With the onscreen keyboard, use the remote control to enter text.

1 On the remote control, press ▲▼◀▶ to move to a key, press **OK** to select the letter or symbol.

2 Do the following to select input options:
← / → : Move the cursor to the left or right.
⌫ : Delete the entry before the cursor.

3 When the text entry is complete, select **OK** on the onscreen keyboard to exit.

To select input mode,

- Select ⏮ / ⏭ on the onscreen keyboard.

↳ On the onscreen keyboard, current input mode is highlighted.

ABC : English input in upper case
abc : English input in low case
E@ : symbols

Select play options

1 During play, press ☰ on the remote control.

2 Press ▲▼◀▶ to select an option. Press **OK** to confirm.

Video options

[Subtitle]: Adjust subtitle settings.

- Press ◀▶ to select an item and ▲▼ to adjust values. Then press **OK** to confirm.

[Audio]: Select an audio language.

[Night mode]: Equalize loud and soft sounds to play media at a low volume level at night.

[GOTO]: Skip play to the specific time.

- Press ◀▶ to select an item and ▲▼ to adjust values. Then press **OK** to confirm.

[Repeat Title]: Repeat the current title.

[Repeat All]: Repeat the movie file.

[Repeat Off]: Turn off a repeat mode.

[Video Setting]: Adjust the video settings.

- Press ▲▼ to select an item and ◀▶ to adjust values. Then press **OK** to confirm.

Audio option

[Repeat Off]: Turn off a repeat mode.

[Repeat One]: Repeat the current music file.

[Repeat All]: Repeat all the music flies.

[Shuffle Loop]: Play music files in a random loop.

Photo options

[Slide Timing]: Set a display interval for a slideshow.

[Slide Transition]: Select a transition effect for a slideshow.

[Repeat Off]: Turn off a repeat mode.

[Repeat All]: Repeat all the photo flies.

[Shuffle Loop]: Play photo files in a random loop.
[Background Music]: Select and play a music file during slideshow.
[Video Setting]: Adjust the video settings.

2 Browse media files

You can browse media files stored in a USB storage device.

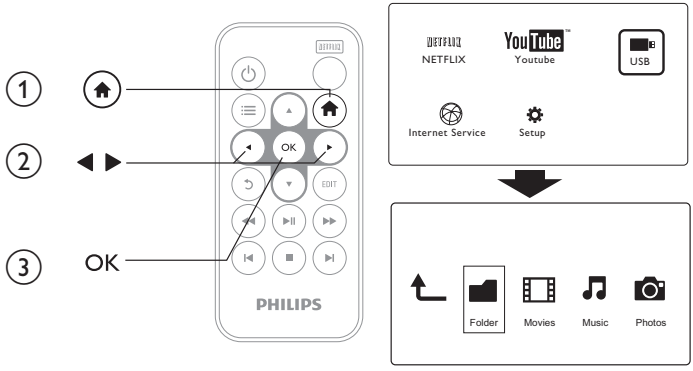

1 Press ⌂.
2 Select **[USB]**.
3 Select a mode to browse media files.
- **[Folder]**
- **[Movies]**
- **[Music]**
- **[Photos]**

Browse all files

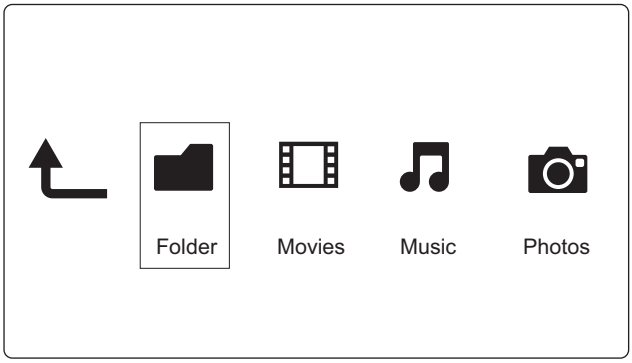

1 Press ◀▶ to select **[Folder]** and press **OK** to confirm.

2 Select your USB storage device and press **OK**.

3 Press ☰ in the file browser.

4 Press ▲ / ▼ to select a mode to view or arrange files.

[Thumbnails]: Display thumbnails of files or folder.
[List]: Display files or folder in a list.
[Preview]: Display files or folders with a preview window.
[All Media] Display all media files.
[Movies]: Display movie files.
[Photos]: Display photo files.
[Music]: Display music files.

Browse movie files

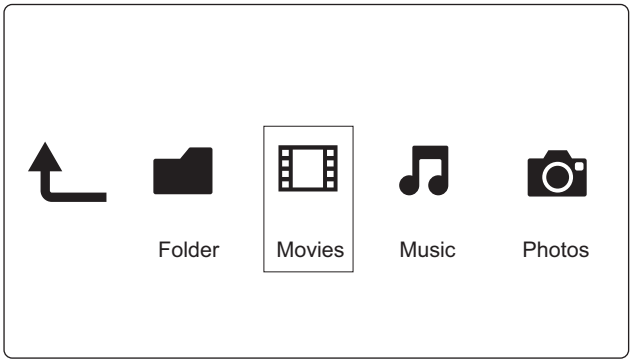

1 Press ◀▶ to select **[Movies]** and press **OK** to confirm.

2 Press ☰ in the file browser.

3 Press ▲ / ▼ to select a mode to view or arrange files.

[Search]: Search movie files. Follow on screen instruction to type in key words in the mini keyboard and press ▶❚❚ to start search.
[Thumbnails]: Display thumbnails of movie files.
[List]: Display movie files in a list.
[Preview]: Display files or folders with a preview window.
[All Movies]: Display all movies files.
[Show DVDs]: Display all files in DVD ISO format.
[Flash Animation]: Display all flash files.
[Go to Folder]: Go to the folder where the selected file is placed.
[Name]: List movies files in an alphabetical order of their names.
[Size]: List movies files in the ascending order of their sizes.
[Most Viewed]: List most viewed movie files.
[Recently Added]: List movie files added recently.

Browse music files

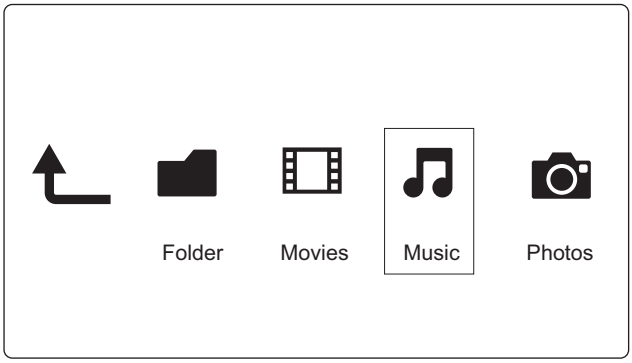

1 Press ◀▶ to select **[Music]** and press **OK** to confirm.

2 Press ☰ in the file browser.

3 Press ▲ / ▼ to select a mode to view or arrange files.

[Search]: Search music files. Follow on screen instruction to type in key words in the mini keyboard and press ▶❚❚ to start search.
[Thumbnails]: Display thumbnails of music files.
[List]: Display music files in a list.
[Preview]: Display music files with a preview window.
[Go to Folder]: Go to the folder where the selected file is placed.
[All Songs]: Display all music files.
[Albums]: Display music files by albums.
[Artists]: Display music files by artists.
[Genres]: Sort music files by genres.
[Years]: Sort music files by years.
[Playlists]: Display play lists.
[Recently Played]: List music files played recently.
[Recently Added]: List music files added recently.
[Name]: List music files in an alphabetical order of their names.

Browse photo files

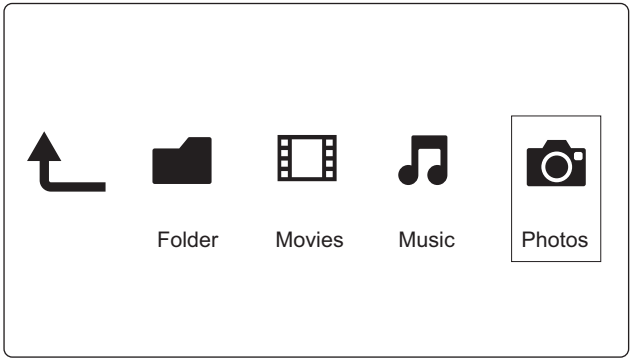

1 Press ◀▶ to select **[Photos]**and press **OK** to confirm.

2 Press ☰ in the file browser.

3 Press ▲ / ▼ to select a mode to view or arrange files.

[Search]: Search photo files. Follow on screen instruction to type in key words in the mini keyboard and press ▶❚❚ to start search.
[Thumbnails]: Display thumbnails of photo files or folder.
[List]: Display files or folder in a list.
[Preview]: Display files or folders with a preview window.
[Photo Directory]: Display photo files in the directory mode.
[Leaf Folder View]: Display photo files in the leaf folder mode.
[Date view]: Sort photo files by date modified.
[All Photos]: Display all photos files.
[Albums]: Sort photo files by albums.
[Go to Folder]: Go to the folder where the selected file is placed.
[Name]: List photo files in an alphabetical order of their names.
[Recently Added]: List photo files added recently.
[Recently Played]: List photo files played recently.

3 Play from online services

Connect the playerto the Internet. You can enjoy online services on the TV.

Note

- Koninklijke Philips Electronics N.V. bears no responsibility for content provided by Net TV service providers.

Connect to the Internet

What you need A wired router that is connected to the Internet

1 Press ⌂.
↳ The home page is displayed.

2 Select **[Setup]** and press **OK**.
↳ The setup menu is displayed.

3 Select **[Network]>[Wireless]**and press **OK**.
↳ A list of available wireless networks is displayed.

4 Select your network from the list and press **OK**.
↳ A mini keyboard is displayed.
- If your network is encrypted with a Wired Equivalent Privacy (WEP) key, select **[Hex code]** or **[ASCII]** to enter the key in hex or ASCII format from the option menu.
- If your network is not in the list, select **[Private AP Setting]** to enter the SSID of your network and web key.

5 Use ▲▼◀▶ and **OK** to enter your key.

6 Press ▶❚❚ to confirm.
↳ A connection test is started
↳ The status of network connection is displayed after the test is completed.

7 Press **OK** to exit.

Note

- To re-scan available wireless networks, press **EDIT**.

Watch online TV or shared video

What you need	Connect this player to the Internet. (see "Set up a network").

1 On the Home screen of the player, select **[Netflix]**.
↳ The Home page of Netflix is displayed.

- To enjoy YouTube video, select **[YouTube]** on the Home screen.

2 On the remote control, do the following to browse the Web pages on your TV.

Function	Button/Action
Select an option	▲▼◀▶
Confirm an option	OK
Exit the Netflix	↩
Stop play	■

Enjoy Internet services

With this player, you can access online services, such as movies, pictures, music, and games.

What you need	Connect this player to the Internet. (see "Set up a network").

1 On the Home screen of the player, select **[Internet Services]** and press **OK**.
↳ The Internet services are displayed.

2 Select a service.

- **[Facebook]**: a social networking service
- **[AccuWeather]**: an online weather forecasting service worldwide
- **[Piccasa]**: an online photo album

3 Follow the on-screen instruction and use your remote control to enjoy the services.

Function	Button/Action
Select a service or item.	▲▼◀▶
Confirm a selection.	OK
Return to a previous page, or delete input text.	↩
Return to the home page.	⌂

4 Manage files

On the player, select the source device on the Home screen. Go to **[Folder]**, and you can manage files on the connected storage devices.

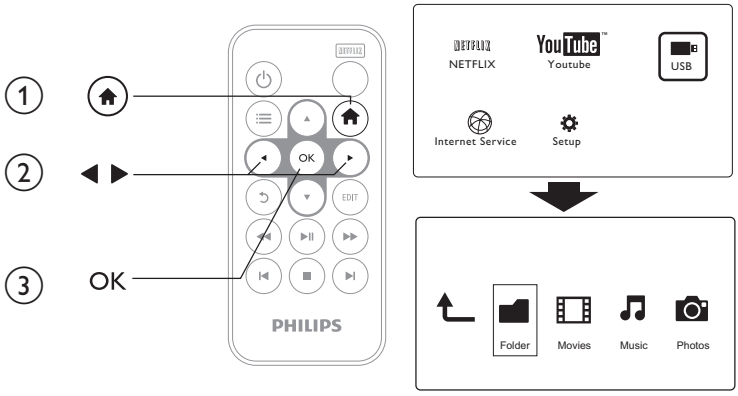

Copy or move files and folders

On the player, you can copy or move files and folders on or between connected storage devices.

1 In **[Folder]**, select a file or folder in the list of files/ folders.
To select multiple files,

① **On the remote control, press EDIT.**
↳ A list of options is displayed.

② **Select [Multiple Select].**
↳ A file list is created for you to add files or folders.

③ **Press ▲ / ▼ to select a file or folder. Press ▶❚❚ to confirm.**

2 On the remote control, press **EDIT**.

3 On the pop-up list of options, select **[Copy]** or **[Move]**.

4 Select a folder on current or another connected device as the destination. Press ▶❚❚ to confirm.
↳ The selected files or folders are copied or moved to the destination.

Delete files and folders

1 Follow Step 1-3 under "Copy or move files and folders" (see 'Copy or move files and folders' on page 8).

2 On the pop-up list of options, select **[Delete]**.
↳ The selected files or folders are deleted from the player.

Rename files and folders

1 In **[Folder]**, select a file or folder in the list of files/ folders.

2 On the remote control, press **EDIT**.

3 On the pop-up list of options, select **[Rename]**.

4 On the pop-up onscreen keyboard, edit the file/ folder name (see 'Text entry' on page 2).

Create music playlists

On the player, you can create playlists for music files you want to play together.

1 In **[Folder]**, select music files.

① **On the remote control, press EDIT.**
↳ A list of options is displayed.

② **Select [Multiple Select].**
↳ A file list is created for you to add files.

③ Press ▲ / ▼ to select a file. Press ▶❚❚ to confirm.

2 On the remote control, press EDIT.

3 On the pop-up list of options, select [Save Playlist].

4 Name the playlist as needed.
↳ A music playlist is created.

Create photo albums

On the player, you can create photo albums for picture files.

1 In [Folder], select picture files.

① On the remote control, press EDIT.
↳ A list of options is displayed.

② Select [Multiple Select].
↳ A file list is created for you to add files.

③ Press ▲ / ▼ to select a file. Press ▶❚❚ to confirm.

2 On the remote control, press EDIT.

3 On the pop-up list of options, select [Save Photo Album].

4 Name the photo album as needed.
↳ A photo album is created.

5 Setup

You can change the setup options of the player.

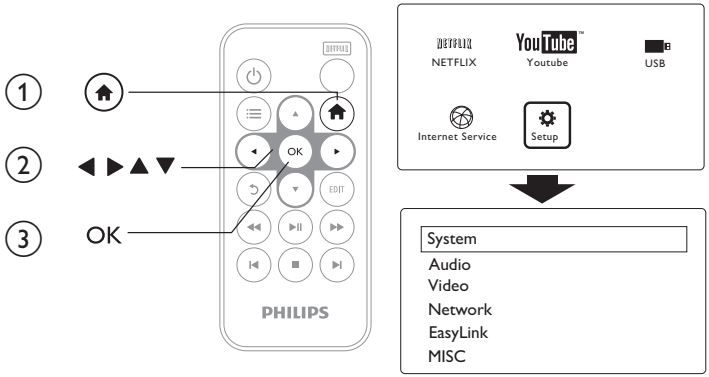

1 On the Home screen, select **[Setup]**.
   ↳ The setup menu is displayed.

2 Press ▲▼◀▶ to select an option. Press **OK** to confirm the option.
   • Press ↩ to return to the upper-level menu.

System

[Menu Language]: Select the language for onscreen menus.
[Subtitle]: Select the subtitle language for videos.
[Screen Saver]: Enable the screen saver when the player is in the idle mode for a selected time span, for example, in pause or stop mode.
[Device Name]: Change the name of this player.
[Resume Play]: Resume video play from the last stop position.
[Factory Default]: Restore factory settings.

Audio

[HDMI Output]: Select audio output for the HDMI connector. Use the HDMI output for the LPCM sound of more than two channels.
[Lip Sync]: Synchronize audio with video play.

Video

[Aspect Ratio]: Select display aspect ratio.
***[TV System]**: Select the video resolution that your TV supports. See your TV manual for details.
***[1080P 24Hz]**: Use 1080p 24 Hz for video output, where 1080p 24 Hz denotes the resolution and frame rate.
[Deep Color]: Display colors with more shades and hues when the video content is recorded in Deep Color mode and the TV supports this feature.

Note

- *If the video resolution is incompatible with your TV, you can see a blank screen. To recover the display, wait for 10 seconds.

Network

[Wireless]: Set up a wireless network connection.
[Network Info]: Display current network status, such as the MAC address, and current IP address and subnet mask.

MISC

[Version Info]: Display the information about the player.

[Device Name]: Change the name of this player
[Online upgrade]: Update the firmware of the player from the Internet.
[USB upgrade]: Update the firmware of the player through a USB storage device.

6 EasyLink

The playersupports Philips EasyLink which uses the HDMI CEC (Consumer Electronics Control) protocol. You can use a single remote control to control EasyLink compliant devices that are connected through HDMI.

1 Through HDMI, connect the player to a TV compliant with the HDMI CEC protocol.

2 On the TV, switch on the functions to allow HDMI CEC operations (Consult the user manual of the TV).

3 On the player, switch on **[Easy Link]**.
- On the Home screen, select **[Setup]** > **[Easy Link]**. Select **[On]**.

4 In **[Easy Link]**, you can select the following options:

[One Touch Play] When you start play on the player, the TV switches to the HDMI input channel automatically.
[One Touch Standby] When you switch the TV to the standby mode, the player switches to the standby mode automatically.
[Auto Power On From TV] When you switch to the input channel of the playeron the TV,the player can switch on automatically from the standby mode.

Note

- Philips does not guarantee 100% interoperability with all HDMI CEC devices.

7 Update the firmware

Before you update the firmware, check current firmware version of the player.
To check the firmware version,

- On the Home screen, go to **[Setup]** > **[MISC]** > **[Version Info.]**.

Update the firmware through the Internet

1. Connect the player to the Internet.
2. On the Home screen of the player, select **[Setup]** > **[MISC]** > **[Online upgrade]**.
   ↳ If a firmware update is detected, you are prompted to start the update.
3. Follow onscreen instructions to complete the update.
   ↳ When the update is complete, the player switches off automatically, and then switches on again.

Update the firmware through a storage device

1. On your computer, do the following:
   - Go to www.philips.com/support to find the latest firmware.
   - Search for your model and click on "Software and drivers".
   - Download the firmware update and save the file to the root directory of a USB storage device.
2. On the player, do the following:
   - Connect the USB storage device.
   - On the Home screen, select **[Setup]** > **[MISC]**> **[USB upgrade]**.

   ↳ If a firmware update is detected, you are prompted to start the update.
3. Follow onscreen instructions to complete the update.
   ↳ When the update is complete, the playerswitches off automatically, and then switches on again.

Caution

- Keep the playerpowered and the storage device mounted before the firmware update is complete.

8 Troubleshooting

If you contact Philips, you will be asked for the model and serial number of this player. The model number and serial number are at the bottom of this player. Write the numbers here:
Model No. _____
Serial No. _____

No picture.

- Refer to the TV user manual for how to select the correct video input channel

No sound output from the TV.

- Make sure that the audio cables are connected to the audio input sockets that are grouped with the selected video input sockets.

The contents of the USB storage device cannot be read.

- The format of this USB storage device is not supported.
- The supported memory size is 1TB maximum.
- Make sure that this player supports these files. (Refer to "**Specifications**" > "**Playable media**")
- DRM-protected video files that are stored on a USB storage device cannot be played through an analog video connection (for example, composite). You need to use an HDMI connection to play these files.

9 Specification

Note

- Specification and design are subject to change without notice.

File
- Video: MPEG 1/2, H.264, VC-1, H.263, WMV (V9), AVI, TS, M2TS, TP, TRP, ISO, VOB, DAT, MP4, MPG, MOV (H.264), ASF, FLV(640 x 480), MKV, M4V.
- Audio: Audio: Dolby digital, AAC, OGG, MKA, MP3, WAV, APE, FLAC, LPCM, PCM, WMA (V9), IMP/MS ADPCM, WMA Pro
- Picture: .JPEG, JPG, PNG, TIFF, GIF (unanimated GIF), BMP, TIF, M-JPEG, HD-JPEG

USB storage device
- Compatibility: Hi-Speed USB (2.0)

Subtitle support
- .srt, .sub, .smi, .ssa, .ass, .txt, .psb, .idx+.sub

Video
- Signal system: PAL /NTSC
- HDMI output: 480i, 480p, 576i, 576p, 720p, 1080i, 1080p, 1080p24

Audio
- Analog stereo output
- Signal to noise ratio (1 kHz): > 90 dB (A-weighted)
- Dynamic Range (1 kHz): > 80 dB (A-weighted)
- Frequency response: +/-0.2 dB

Main Unit
- Dimensions (L x W x H): 136 x 86 x 52 mm
- Net Weight: 0.41 Kg

Power
- Input: DC 5V 1.5A
- Power consumption: < 7.5 W
- Power consumption in standby mode: < 1 W

NOTICE

SOFTWARE END USER LICENSE AGREEMENT

THIS SOFTWARE END USER LICENSE AGREEMENT ("THIS AGREEMENT") IS A LEGAL AND BINDING AGREEMENT BETWEEN YOU (EITHER AN INDIVIDUAL OR ENTITY) AND PHILIPS CONSUMER LIFESTYLE B.V. A DUTCH LIMITED LIABILITY COMPANY, WITH ITS PRINCIPAL OFFICE AT HIGH TECH CAMPUS 37, 5656 AE EINDHOVEN, THE NETHERLANDS AND ITS SUBSIDIARY COMPANIES (INDIVIDUALLY AND COLLECTIVELY "PHILIPS"). THIS AGREEMENT GIVES YOU THE RIGHT TO USE CERTAIN SOFTWARE (THE "SOFTWARE") INCLUDING USER DOCUMENTATION IN ELECTRONIC FORM WHICH MAY HAVE BEEN PROVIDED SEPARATELY OR TOGETHER WITH A PHILIPS PRODUCT (THE "DEVICE") OR A PC. BY DOWNLOADING, INSTALLING OR OTHERWISE USING THE SOFTWARE, YOU ACCEPT AND AGREE TO BE BOUND BY ALL OF THE TERMS AND CONDITIONS OF THIS AGREEMENT. IF YOU DO NOT AGREE TO THESE TERMS AND CONDITIONS, DO NOT DOWNLOAD, INSTALL OR OTHERWISE USE THE SOFTWARE. IF YOU ACQUIRED THE SOFTWARE IN TANGIBLE MEDIA E.G. CD WITHOUT THE OPPORTUNITY TO REVIEW THIS LICENSE AND DO NOT ACCEPT THESE TERMS, YOU MAY RECEIVE A FULL REFUND OF THE AMOUNT, IF ANY, THAT YOU PAID FOR THE SOFTWARE IF YOU RETURN THE SOFTWARE UNUSED WITH PROOF OF PAYMENT WITHIN 30 DAYS FROM THE DATE OF PURCHASE.

1. **Grant of License.** This Agreement grants you a non-exclusive, nontransferable, non-sub licensable license to install and use, on the Device or a PC, as applicable, one (1) copy of the specified version of the Software in object code format as set out in the user documentation solely for your personal use. The Software is "in use" when it is loaded into the temporary or permanent memory (i.e. RAM, hard disk, etc.) of the PC or the Device.

2. **Ownership.** The Software is licensed and not sold to you. This Agreement grants you only the right to use the Software, but you do not acquire any rights, express or implied, in the Software other than those specified in this Agreement. Philips and its licensors retain all right, title, and interest in and to the Software, including all patents, copyrights, trade secrets, and other intellectual property rights incorporated therein. The Software is protected by copyright laws, international treaty provisions, and other intellectual property laws. Therefore, other than as expressly set forth herein, you may not copy the Software without prior written authorization of Philips, except that you may make one (1) copy of the Software for your back-up purposes only. You may not copy any printed materials accompanying the Software, nor print more than one (1) copy of any user documentation provided in electronic form, except that you may make one (1) copy of such printed materials for your back-up purposes only.

3. **License Restrictions.** Except as provided otherwise herein, you shall not rent, lease, sublicense, sell, assign, loan, or otherwise transfer the Software. You shall not, and you shall not permit any third party, to reverse engineer, decompile, or disassemble the Software, except to the extent that applicable law expressly prohibits the foregoing restriction. You may not remove or destroy any product identification, copyright notices, or other proprietary markings or restrictions from the Software. All titles, trademarks, and copyright and restricted rights notices shall be reproduced on your back up copy of the Software. You may not modify or adapt the Software, merge the Software into another program or create derivative works based upon the Software.

4. **Termination of certain functionality.** The Software may contain components of certain licensed software including software licensed from Microsoft Corporation ("Microsoft") which implements Microsoft's digital rights management technology for Windows Media. Content providers are using the digital rights management technology for Windows Media ("WM-DRM") to protect the integrity of their content ("Secure Content") so that their intellectual property, including copyright, in such content is not misappropriated. Your Device may also use WM-DRM software to transfer or play Secure Content ("WM-DRM Software"). If the security of such

WM-DRM Software is compromised, Microsoft may revoke (either on its own or upon the request of the owners of Secure Content ("Secure Content Owners")) the WM-DRM Software's right to acquire new licenses to copy, store, transfer, display and/or play Secure Content. Revocation does not alter the WM-DRM Software's ability to play unprotected content. A list of revoked WM-DRM Software is sent to your PC and/or your Device whenever you download a license for Secure Content. Microsoft may, in conjunction with such license, also download revocation lists onto your Device on behalf of Secure Content Owners, which may disable your Device's ability to copy, store, display, transfer, and/or play Secure Content. Secure Content Owners may also require you to upgrade some of the WM-DRM components distributed with this Software ("WM-DRM Upgrades") before accessing their content. When you attempt to play Secure Content, WM-DRM Software built by Microsoft will notify you that a WM-DRM Upgrade is required and then ask for your consent before the WM-DRM Upgrade is downloaded. WM-DRM Software built by Philips may do the same. If you decline the upgrade, you will not be able to access Secure Content that requires the WM-DRM Upgrade; however, you will still be able to access unprotected content and Secure Content that does not require the upgrade. WM-DRM features that access the Internet, such as acquiring new licenses and/or performing a required WM-DRM Upgrade, can be switched off. When these features are switched off, you will still be able to play Secure Content if you have a valid license for such content already stored on your Device. However, you will not be able to use certain of the WM-DRM Software features that require Internet access such as the ability to download content that requires the WM-DRM Upgrade. All title and intellectual property rights in and to the Secure Content is the property of the respective Secure Content owners and may be protected by applicable copyright or other intellectual property laws and treaties. This Agreement grants you no rights to use such Secure Content. **To summarize, if the Software contains Microsoft WM-DRM components – Secure Content you desire to download, copy, store, display, transfer, and/or play is protected by the Microsoft WM-DRM components of the Software. Microsoft, Secure Content Owners, or Secure Content distributors may deny you access, or restrict your access, to Secure Content even after you**

have paid for, and/or obtained, it. Neither your consent nor the consent or approval of Philips is necessary for any of them to deny, withhold or otherwise restrict your access to Secure Content. Philips does not guaranty that you will be able to download, copy, store, display, transfer, and/or play Secure Content.

5. **Open Source Software.** (a) This software may contain components that are subject to open-source terms, as stated in the documentation accompanying the Device. This Agreement does not apply to this software as such. (b) Your license rights under this Agreement do not include any right or license to use, distribute or create derivative works of the Software in any manner that would subject the Software to Open Source Terms. "Open Source Terms" means the terms of any license that directly or indirectly (1) create, or purport to create, obligations for Philips with respect to the Software and/or derivative works thereof; or (2) grant, or purport to grant, to any third party any rights or immunities under intellectual property or proprietary rights in the Software or derivative works thereof.

6. **Termination.** This Agreement shall be effective upon installation or first use of the Software and shall terminate (i) at the discretion of Philips, due to your failure to comply with any term of this Agreement; or (ii) upon destruction of all copies of the Software and related materials provided to you by Philips hereunder. Philips's rights and your obligations shall survive the termination of this Agreement.

7. **Upgrades.** Philips may, at its sole option, make upgrades to the Software available by general posting on a website or by any other means or methods. Such upgrades may be made available pursuant to the terms of this Agreement or the release of such upgrades to you may be subject to your acceptance of another agreement.

8. **Support Services.** Philips is not obligated to provide technical or other support ("Support Services") for the Software. If Philips does provide you with Support Services, these will be governed by separate terms to be agreed between you and Philips.

9. **Limited Software Warranty.** Philips provides the Software 'as is' and without any warranty except that the Software will perform substantially

in accordance with the documentation accompanying the Software for a period of one year after your first download, installation or use of the Software, whichever occurs first. Philips' entire liability and your exclusive remedy for breach of this warranty shall be, at Philips' option, either (i) return of the price paid by you for the Software (if any); or (b) repair or replacement of the Software that does not meet the warranty set forth herein and that is returned to Philips with a copy of your receipt. This limited warranty shall be void if failure of the Software has resulted from any accident, abuse, misuse or wrongful application. Any replacement Software will be warranted for the remainder of the original warranty period or thirty (30) days, whichever is longer. This limited warranty shall not apply to you if the Software was provided to you free of charge on an evaluation only basis.

10. **NO OTHER WARRANTIES.** EXCEPT AS SET FORTH ABOVE, PHILIPS AND ITS LICENSORS DO NOT WARRANT THAT THE SOFTWARE WILL OPERATE ERROR FREE OR UNINTERRUPTED, OR WILL MEET YOUR REQUIREMENTS. YOU ASSUME ALL RESPONSIBILITIES FOR SELECTION OF THE SOFTWARE TO ACHIEVE YOUR INTENDED RESULTS, AND FOR THE INSTALLATION OF, USE OF, AND RESULTS OBTAINED FROM THE SOFTWARE. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, PHILIPS AND ITS LICENSORS DISCLAIM ALL WARRANTIES AND CONDITIONS, WHETHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND ACCURACY OR COMPLETENESS OF RESULTS WITH RESPECT TO THE SOFTWARE AND THE ACCOMPANYING MATERIALS. THERE IS NO WARRANTY AGAINST INFRINGEMENT. PHILIPS DOES NOT WARRANT THAT YOU WILL BE ABLE TO DOWNLOAD, COPY, STORE, DISPLAY, TRANSFER, AND/OR PLAY SECURE CONTENT.

11. **LIMITATION OF LIABILITY.** UNDER NO CIRCUMSTANCES WILL PHILIPS OR ITS LICENSORS BE LIABLE FOR ANY CONSEQUENTIAL, SPECIAL, INDIRECT, INCIDENTAL OR PUNITIVE DAMAGES WHATSOEVER, INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS OR REVENUES, BUSINESS INTERRUPTION, LOSS OF

BUSINESS INFORMATION, LOSS OF DATA, LOSS OF USE OR OTHER PECUNIARY LOSS, EVEN IF PHILIPS OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT SHALL PHILIPS' OR ITS LICENSORS' AGGREGATE LIABILITY FOR DAMAGES ARISING OUT OF THIS AGREEMENT EXCEED THE GREATER OF THE PRICE ACTUALLY PAID BY YOU FOR THE SOFTWARE OR FIVE POUNDS STERLING (5.00).

12. **Trademarks.** Certain of the product and Philips names used in this Agreement, the Software, and the printed user documentation may constitute trademarks of the Philips, its licensors or other third parties. You are not authorized to use any such trademarks.

13. **Export Administration.** You agree that you will not directly or indirectly, export or re-export the Software to any country for which the United States Export Administration Act, or any similar United States law or regulation requires an export license or other U.S. Government approval, unless the appropriate export license or approval has first been obtained. By downloading or installing the Software you agree to abide by this Export provision.

14. **Governing law.** This Agreement is governed by the laws of your country of residence , without reference to its conflict of laws principles. Any dispute between you and Philips regarding this Agreement shall be subject to the non-exclusive jurisdiction of the courts of your country of residence.

15. **General.** This Agreement contains the entire agreement between you and Philips and supersedes any prior representation, undertaking or other communication or advertising with respect to the Software and user documentation. If any part of this Agreement is held invalid, the remainder of this Agreement will continue in full force and effect. This Agreement shall not prejudice the statutory rights of any party dealing as a consumer.

EULA-English (UK)
September 2009

PHILIPS

Philips Consumer Lifestyle

HK-1152-HMP2000 (*Report No. / Numéro du Rapport*)

Year 2011 (*Year in which the CE mark is affixed / Année au cours de laquelle le marquage CE a été apposé*)

EC DECLARATION OF CONFORMITY

(DECLARATION DE CONFORMITE CE)

We / Nous, PHILIPS CONSUMER LIFESTYLE B.V.
(Name / Nom de l'entreprise)

TUSSENDIEPEN 4, 9206 AD DRACHTEN, THE NETHERLANDS
(address / adresse)

Declare under our responsibility that the electrical product(s):
(Déclarons sous notre propre responsabilité que le(s) produit(s) électrique(s):)

Philips (*brand name, nom de la marque*)	HMP200xy/05, /12, /51, /58 ("x" can be 0 - 9 for cabinet colour difference, "y" can be A-Z or blank) (*Type version or model, référence ou modèle*)

HD Media Player
(*product description, description du produit*)

To which this declaration relates is in conformity with the following harmonized standards:
(Auquel cette déclaration se rapporte, est conforme aux normes harmonisées suivantes)
(*title, number and date of issue of the standard / titre, numéro et date de parution de la norme*)

EN55013: (2001), Am1 (2003), Am2 (2006)
EN55020: (2007)
EN55022: (2006), Am1 (2007)
EN61000-3-2: (2006), Am2 (2009)
EN61000-3-3: (2008)
EN301489-1 V1.8.1 (2008)
EN301489-17 V2.1.1 (2009)
EN300328 V1.7.1 (2006)
EN62311: (2008)
EN60065: (2002), Am1 (2006), Am11 (2008)
EN62301: (2005)

Following the provisions of :
(Conformément aux exigences essentielles et autres dispositions pertinentes de:)

2006/95/EC (Low Votage Directive)
1999/5//EC (R&TTE Directive)
2009/125/EC (ErP Directive)
- EC/1275/2008
- EC/278/2009

And are produced under a quality scheme at least in conformity with ISO 9001 or CENELEC Permanent Documents
(Et sont fabriqués conformément à une qualité au moins conforme à la norme ISO 9001 ou aux Documents Permanents CENELEC)

The Notified Body (L'Organisme Notifié) TUV SUD PSB Pte Ltd. TUV SUD China (*Name and number/ nom et numéro*) performed (a effectué) CB test R&TTE test (description of intervention / description de l'intervention)

SG-TN-01958
NC/16474

And issued the certificate, (*et a délivré le certificat*) (*certificate number / numéro du certificat*)

Drachten, Netherlands, Dec.23, 2011 (*place,date / lieu, date*)

A.Speelman, CL Compliance Manager (*signature, name and function / signature, nom et fonction*)

Specifications are subject to change without notice
© 2011 Koninklijke Philips Electronics N.V.
All rights reserved.

HMP2000_05_UM_V1.1